OLYMPUS

Quick Start Guide
FE-180/X-745

Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

© 2006 OLYMPUS IMAGING CORP.
Printed in Japan

1AG6P1P3131--

VH756601

1 Gather these items (box contents)

Digital Camera

Strap

AA NiMH Batteries (two)


Battery Charger (NC-TDR02)

USB Cable

AV Cable

OLYMPUS Master CD-ROM

Items not shown: Advanced Manual (CD-ROM), Basic Manual, warranty card.
Contents may vary depending on purchase location.

Attach the strap

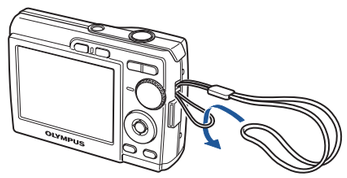

● Pull the strap tight so that it does not come loose.

2 Prepare the batteries

a. Charge the batteries.

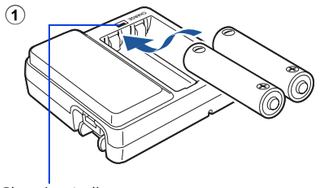

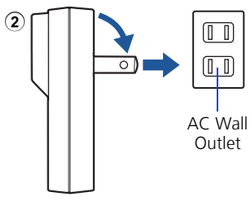

● Batteries come partially charged.

b. Insert the batteries in the camera.

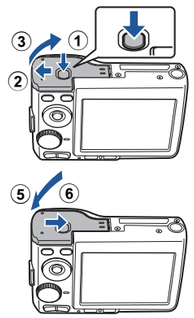

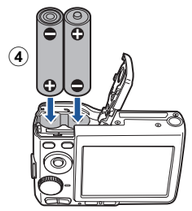

3 Turn the camera on

This explains how to turn on the camera in shooting mode.

a. Set the mode dial to AUTO.

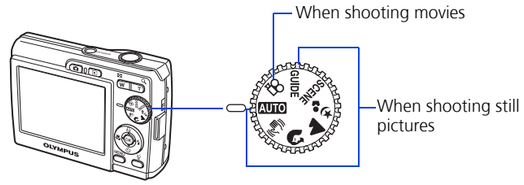

Still picture shooting modes

AUTO	For normal shooting.
	This function reduces the blur incurred by a moving subject or camera movement when taking pictures.
	Suitable for taking pictures of people.
	Suitable for taking pictures of a landscape.
	Suitable for taking pictures of people at night.
SCENE	Select from 10 scene modes according to the shooting conditions.
GUIDE	Use the shooting guide displayed on the screen to shoot pictures according to the situation.

b. Press the POWER button.

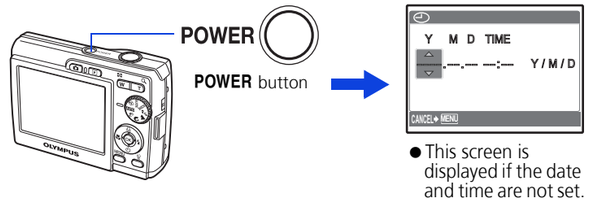

● This screen is displayed if the date and time are not set.

● To turn off the camera, press the **POWER** button once again.

4 Set the date and time

About the date and time setting screen

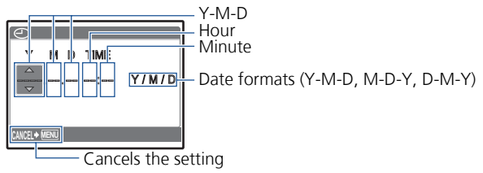

a. Press the △ and ▽ buttons to select [Y].

• The first two digits of the year are fixed.

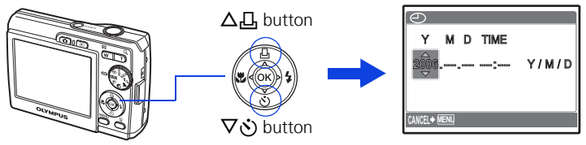

b. Press the ▷ button.

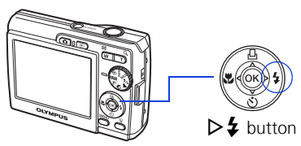

c. Press the △ and ▽ buttons to select [M].

d. Press the ▷ button.

e. Press the △ and ▽ buttons to select [D].

f. Press the ▷ button.

g. Press the △ and ▽ buttons to select the hours and minutes.

h. Press the ▷ button.

i. Press the △ and ▽ buttons to select [Y/M/D].

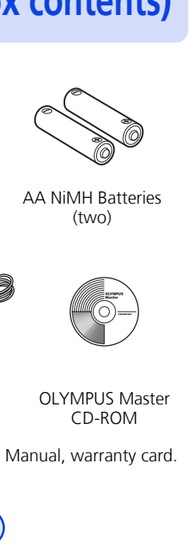

j. After all settings have been set, press ⓞ.

• The time is displayed in the 24-hour format.

• For a more accurate setting, press ⓞ when the time signal hits 00 seconds.

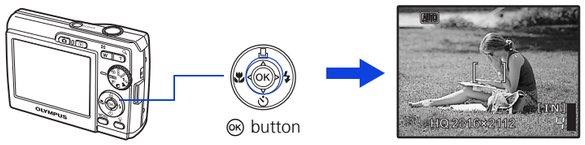

5 Take a picture

a. Hold the camera.

b. Focus.

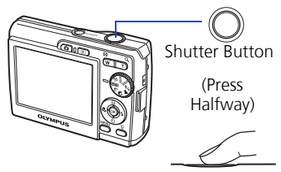

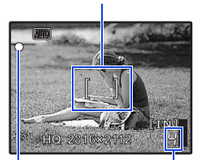
Place this mark over your subject.
The number of pictures that can be taken is displayed.
The green lamp indicates the focus and exposure are locked.

c. Shoot.

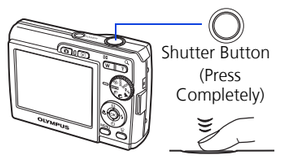

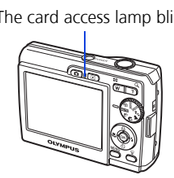

6 Review your pictures

a. Press the ▶ button.

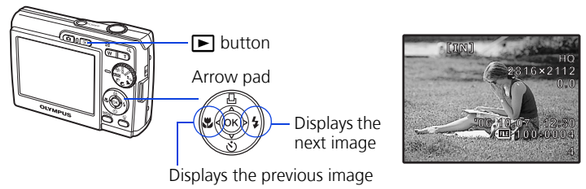

Erase pictures

a. Press the ◁ and ▷ buttons to display the picture you want to erase.

b. Press the 🗑 button.

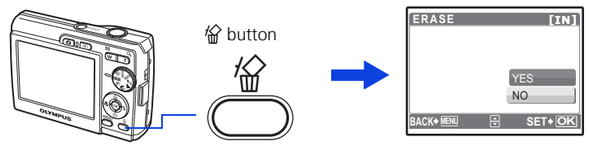

c. Press the △ button, select [YES], and press ⓞ.

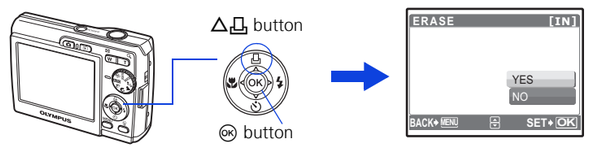

OLYMPUS

Guia de iniciação rápida FE-180/X-745

Começar aqui

Para maiores informações, consulte os Manuais Básico e Avançado ou visite a página web www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

1 Reunir estes itens (conteúdo da embalagem)

Câmara Digital

Correia


Pilhas NiMH formato AA (duas)


Carregador de bateria (NC-TDR02)

Cabo USB

Cabo AV

CD-ROM OLYMPUS Master

Itens não visualizados: Manual avançado (CD-ROM), Manual básico, certificado de garantia. O conteúdo pode variar mediante o local de aquisição.

Colocar a correia

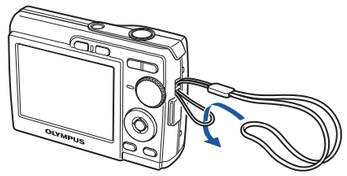

● Puxar bem a correia de modo a que não fique solta.

2 Preparar as pilhas

a. Carregar as pilhas.

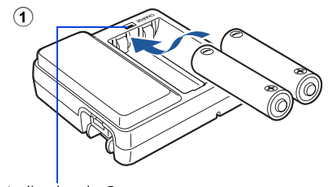

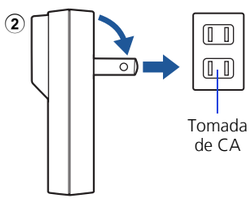

● As pilhas vêm parcialmente carregadas.

b. Introduzir as pilhas na câmara.

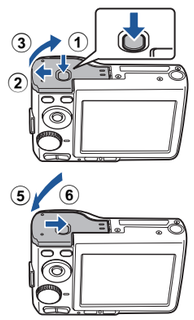

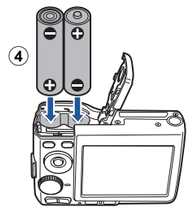

3 Ligar a câmara

Este modo explica como ligar a câmara no modo fotografia.

a. Colocar o selector de modo em AUTO.

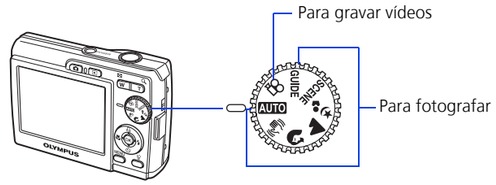

Modos de fotografia de imagem parada

AUTO	Para uma fotografia normal.
	Esta função reduz o efeito de arrastamento resultante de um tema fotográfico em movimento ou do próprio movimento da câmara ao fotografar.
	Ideal para fotografar pessoas.
	Ideal para fotografar uma paisagem.
	Ideal para fotografar pessoas à noite.
SCENE	Seleccionar de entre 10 modos de cena mediante as condições fotográficas.
GUIDE	Usar o assistente de fotografia, visualizado no ecrã, para fotografar imagens mediante a situação.

b. Premir o botão POWER.

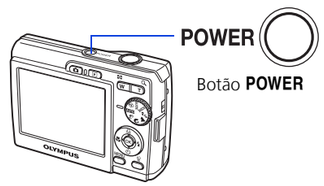

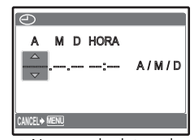

● No caso da data e da hora não estarem definidas, é visualizado o ecrã seguinte.

● Para desligar a câmara, premir novamente o botão **POWER**.

4 Definir a data e hora

Sobre o ecrã de definição da data e hora

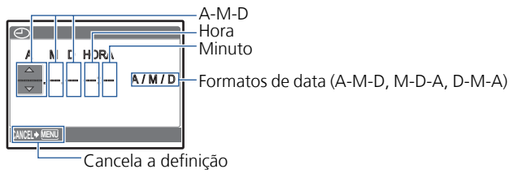

a. Premir os botões △凸 e ▽⏲ de modo a seleccionar [A].

• Os primeiros dois dígitos do ano são fixos.

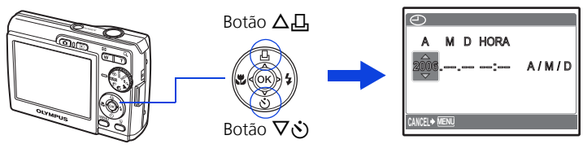

b. Premir o botão ▷ϟ.

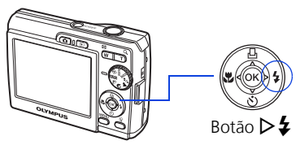

c. Premir os botões △凸 e ▽⏲ para seleccionar [M].

d. Premir o botão ▷ϟ.

e. Premir os botões △凸 e ▽⏲ de de modo a seleccionar [D].

f. Premir o botão ▷ϟ.

g. Premir os botões △凸 e ▽⏲ para seleccionar as horas e minutos.

h. Premir o botão ▷ϟ.

i. Premir os botões △凸 e ▽⏲ para seleccionar [A/M/D].

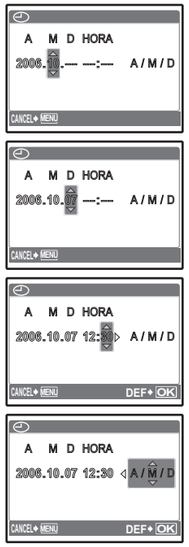

j. Depois de configuradas todas as definições, premir ⓞ.

• A hora é visualizada no formato de 24 horas.
• Para uma definição mais precisa, premir ⓞ quando o sinal de hora chegar aos 00 segundos.

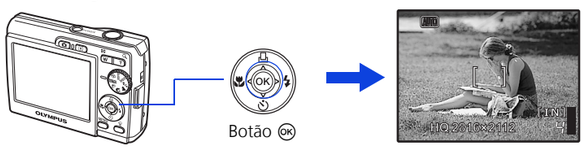

5 Fotografar

a. Segurar a câmara.

Segurar na horizontal

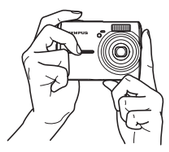

Segurar na vertical

b. Focagem.

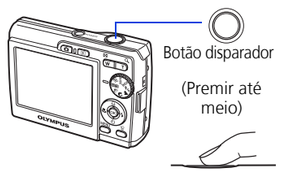

Centrar esta marca sobre o seu tema fotográfico.

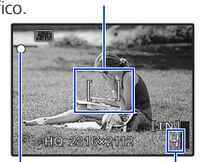
É visualizado o número de imagens disponíveis para fotografar.
A luz verde indica que a focagem e a exposição estão bloqueadas.

c. Fotografar.

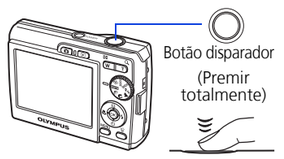

A luz de acesso do cartão fica intermitente.

6 Ver as suas imagens

a. Premir o botão ▶.

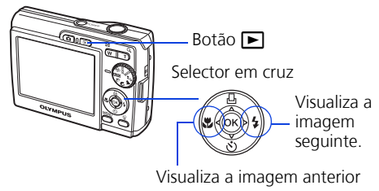

Apagar imagens

a. Premir os botões ◁ and ▷ϟ de modo a visualizar a imagem que pretende apagar.

b. Premir o botão 🗑.

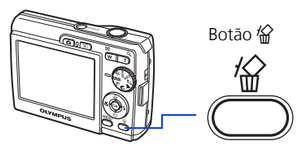

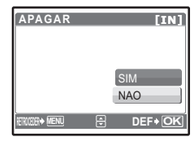

c. Premir o botão △凸, para seleccionar [SIM], e premir ⓞ.